


Technical News (Equipment Support)


FUJIFILM DL400/410/430: Cleaning print mount absorbent pads.

To maintain optimum quality prints from the Frontier DL400/410/430 printer it is important to carry out the periodic maintenance specified in the Starting guide and in the FUJIFILM UK training manual. The current advice on cleaning the print mount is to perform it weekly. This advice has now changed and cleaning of the print mount absorbent pads is now required daily. The reason for this is that dust and debris will build up on these pads and absorb ink. This dust and debris can then cause marks on the back of prints. The method for cleaning these pads is detailed in this document.

First open the top cover door.

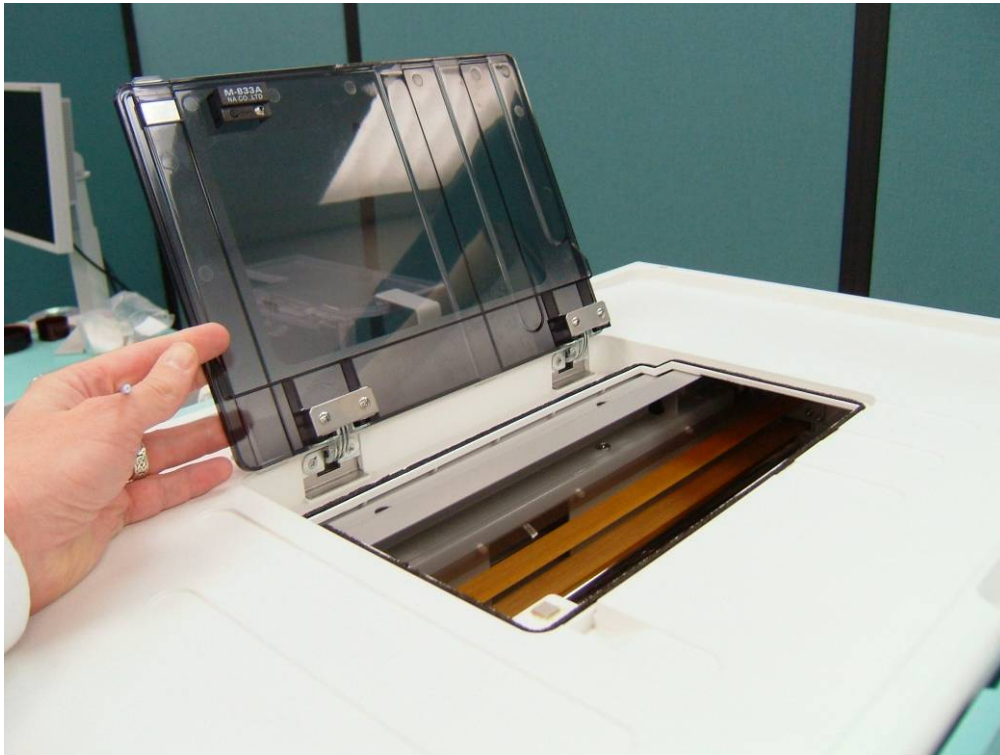

Then with a cotton bud wipe the absorbent pads in the direction of paper transport. Only a light pressure is required as the aim is to remove any dust and debris on the pads, not to soak up the ink.

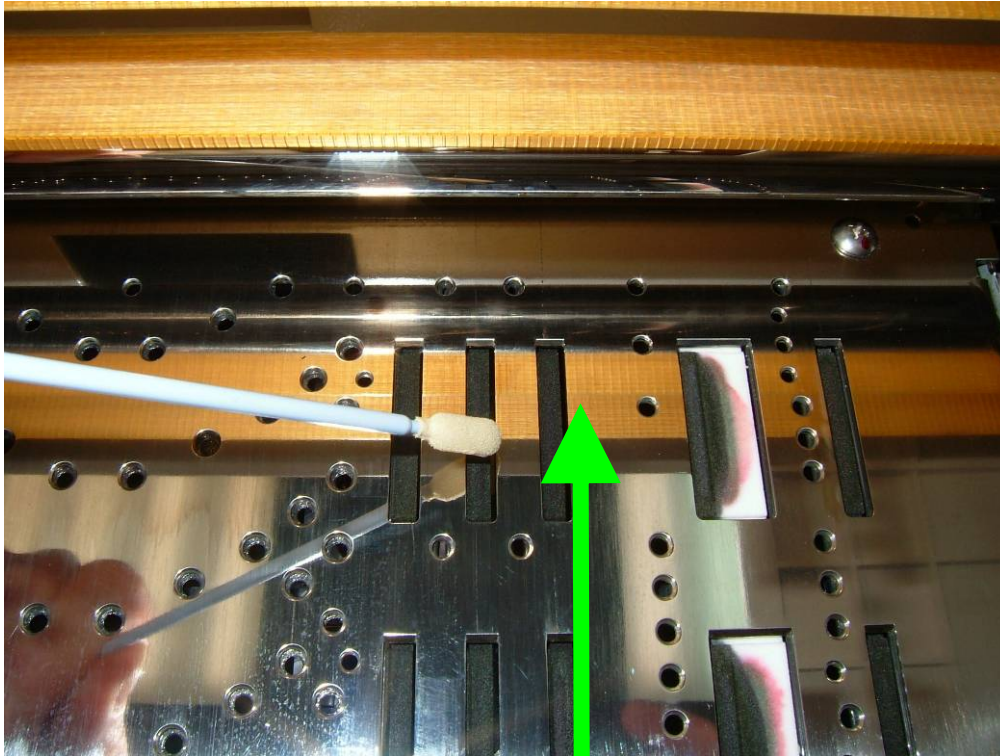

Clean in this direction

Please note that the cleaning of the rest of the print mount can remain on a weekly basis it is just the pads that require cleaning daily.