

FINEPIX S9900W/S9800

Extend your vision



50x

Equiv. 135	Focal Length
80mm	4.3mm
100	14.4
135	18.0
200	24.4
300	35.9
500	53.9
830	149.1

Wide

Super
Macro

FINEPIX

WiFi

STEREO
L R

T•W

ON/OFF

16
MEGA PIXELS

EVF
LCD




● Red



○ White



● Black



1 Powerful zoom and Super Macro



Wide 24mm


50x Telephoto 1200mm

1cm Super Macro

50x Fujinon optical zoom lens (24mm - 1200mm)* covers an enormous focal range with no need to ever change lenses.

* 35mm format equivalent

4 Totally control camera shake at high magnification

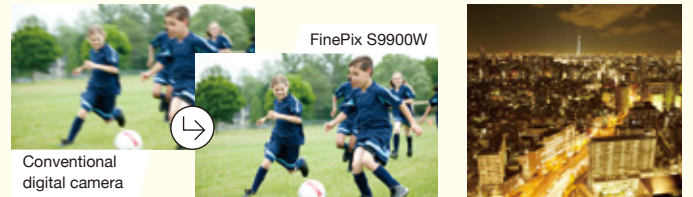

Conventional digital camera


The 3.0-stop* lens shift optical image stabilization system reduces camera shake even when shooting sports, nightscapes and ultra telephoto shots.

*CIPA standards

2 High Resolution (920K-dot) EVF and 16.2 megapixel CMOS Sensor



The high-resolution (920K-dot) electronic viewfinder allows you to frame images precisely.

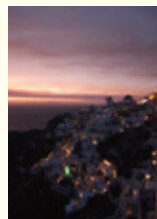

16.2 megapixel backlit CMOS sensor delivers high-quality images in low light, continuous shooting of 10.0fps and quick response.

5 Advanced Filter and SR AUTO

▼ Sketch



▼ Dynamic Tone



▼ Partial Color



▼ Others

Toy Camera, Pop Color, Soft Focus, Low-Key, High-Key, Miniature, Cross Screen, Fish-Eye


[Advanced Filter] 11 special filters offer a variety of picture taking effects.

[SR AUTO] Scenes are automatically detected and the appropriate camera settings selected: Portrait, Landscape, Night, Macro, Night Portrait, and Backlit Portrait.

3 Full HD Movie (1080i/60fps)



One-touch Movie button

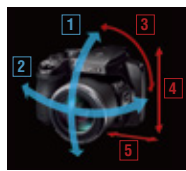

5-Axis Image Stabilization

The 5-Axis Image Stabilization function provides easy video recording, even at telephoto (1200mm) settings.

6 Connect to your smartphone for extra enjoyment



Remote Shooting* Take pictures remotely from your smartphone or tablet - perfect for timid subjects.



Wireless Image Transfer* Photos can easily be transferred to your smartphone or tablet.

*Install the free FUJIFILM Camera Remote app onto the smartphone or tablet first.

For more information, please visit our Website:

http://www.fujifilm.com/products/digital_cameras/s/finepix_s9900w/



Logo is a trademark. All other trademarks are the property of their respective holders.

Specifications are subject to change without notice. All sample photos are simulated images. ©2015 FUJIFILM Corporation

