

STYLISH & TOUGH



Waterproof
50ft / 15m



Freezeproof
14°F / -10°C



Shockproof
5.8ft / 1.75m



Dustproof



FINEPIX **XP90**



FUJIFILM

FINEPIX XP90



Tough enough to shoot in all situations

Integrates four rugged protection features: waterproof to 50ft/15m, freezeproof to 14°F/-10°C, shockproof to withstand drops from 5.8ft/1.75m, and dustproof to keep out sand and other foreign particles. The camera is suitable for a variety of outdoor scenes.



Compact and versatile

BSI-CMOS Sensor with Wide Angle, 5x Optical Zoom lens

High-resolution 16.4 megapixel sensor & continuous shooting mode


Thanks to the 16.4 megapixel BSI-CMOS sensor, even dark scenes can be captured in bright clarity. The camera automatically adjusts shooting settings according to the scene, and features 10.0 fps high-speed continuous shooting.



Change the camera to continuous shooting mode by simply pressing the "Burst mode button," allowing you to quickly respond to sudden photo opportunities.

High-performance Fujinon Zoom Lens

The widest setting of 28mm* on the high-performance, versatile Fujinon 5x optical zoom lens is perfectly suited to close up action shots and beautiful natural scenes. Clear portraits are easy using the 5x optical zoom and you can get even closer using the 10x Intelligent Digital Zoom.

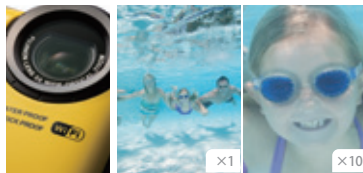

*35mm format equivalent

Frame your shots with clear and excellent visibility

Large 3-inch 920K-dot LCD monitor

Despite a larger 3-inch high-definition 920K-dot LCD monitor, the camera manages to maintain its compactness with a weight of approx. 203g*. The LCD monitor also features an anti-reflective coating, assuring it's clear and easy to use, even in bright and sunny conditions. The brightness is automatically adjusted in response to the lighting conditions to maintain optimal visibility while preventing unnecessary battery drain.



*including battery and memory card

"Speed up time" with built-in interval shooting functions

Create amazing time-lapse movies

Interval Shooting mode lets you capture multiple images of a scene taken at set intervals. Capture a beautiful sunrise or clouds moving through the sky, and the new "Time-Lapse Movie" feature will automatically turn these image sequences into a movie clip showing the passing of time. Simply select "Still image + Movie" for interval shooting settings. Of course, the still images from the conventional interval shooting can also be saved. The speed can be altered by selecting the video frame rate from 10, 30, and 60fps, with multiple video sizes including Full-HD.



Connect to your smartphone and tablet

Wireless sharing and remote shooting

Image transfer to smartphones*

A single push of the Wi-Fi button transfers photos to your smartphone or tablet, allowing you to quickly and easily share photos with friends and family. Images and videos within the camera can be browsed from your smartphone as well.



Control your camera with your smartphone or tablet*

The remote shooting function allows you to shoot pictures from your smartphone or tablet from distant locations. You can also adjust the zoom setting or switch to movie recording, allowing you to use the camera in a wide range of situations, from harsh natural environments to group photos and selfies.



*Install the free FUJIFILM Camera Remote app onto the smartphone or tablet first.

For more information, please visit our Website:

http://www.fujifilm.com/products/digital_cameras/xp/finepix_xp90/

FUJIFILM

©2015 FUJIFILM Corporation
Specifications are subject to change without notice. All sample photos are simulated images.
Logo is a trademark. All other trademarks are the property of their respective holders.

