

Perfect view at day and night



The 8 x 50 FMTR Day+Night from Fujinon combines top quality binoculars with a binocular night-vision instrument and offers unparalleled flexibility for a wide range of applications

- ▶ Police and security sector
- ▶ Marine and professional shipping
- ▶ Long range observation

Fujinon. To see more is to know more.

FUJINON


The 8x magnification is ideal for distance observation at any time of the day and night

The large eye relief of 25 or 31 mm permits the binoculars to be used with spectacles as well as with a mask or a face shield


Two in one: The high-resolution 8x 50 binoculars and binoculars night vision instruments with interchangeable oculars for quick and easy exchange

The flat field technology facilitates unbeatable sharpness right to the edges of the image

The excellently crafted, rugged design is US Military tested and 100% watertight

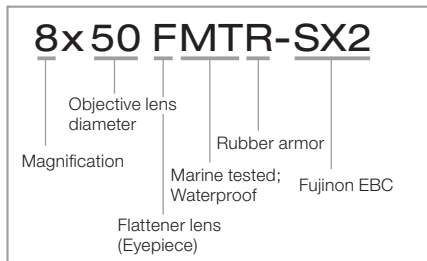

50 mm objective lenses permit a high incidence of light with up to 90% light transmission in the visible spectrum

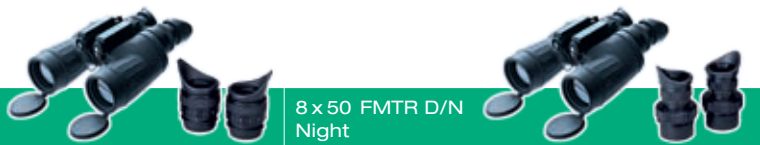

Technical data	8 x 50 FMTR D/N Day	8 x 50 FMTR D/N Night
Magnification	8x	8x
Objective diameter (mm)	50	50
Eye relief (mm)	31.1	24.5
Field of view	6.4°	4.5°
Field of view at 1,000 m (m)	112	79
Exit pupil (mm)	6.25	–
Relative brightness	39	–
Adjustment range for interpupillary distance (mm)	60–74	60–74
Length (mm)	238	251
Dimensions W x H (mm)	219 x 82	219 x 82
Weight (kg)	1.9	2.0
Waterproof	Yes	Yes
Battery	No required	2x CR123A

Together with the night vision specialists Photonis, Fujifilm has optimised selected image intensifiers for use in its 8x50 FMTR D/N Binocular. More information can be submitted on request. Note: These binoculars are subject to special purchasing and export license regulations.



FUJIFILM Europe GmbH

Heesenstr. 31, 40549 Düsseldorf, Germany
 Tel.: +49 211-50 89 0, Fax: +49 211-50 89 344
 www.fujifilm.eu

Specifications are subject to change without notice. 03/16